 



# DX-500R and TS500R : Accessory and I/O Configuration Reference Guide (Website)

 
## STANDARD ACCESSORIES




1700-0014  
Power Adapter

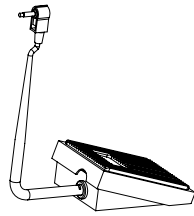

7045-9020  
Foot Switch




FTKIT  
Air Hose Fitting

 

TSD800-6

## OPTIONAL ACCESSORIES

### DX-ECABLE

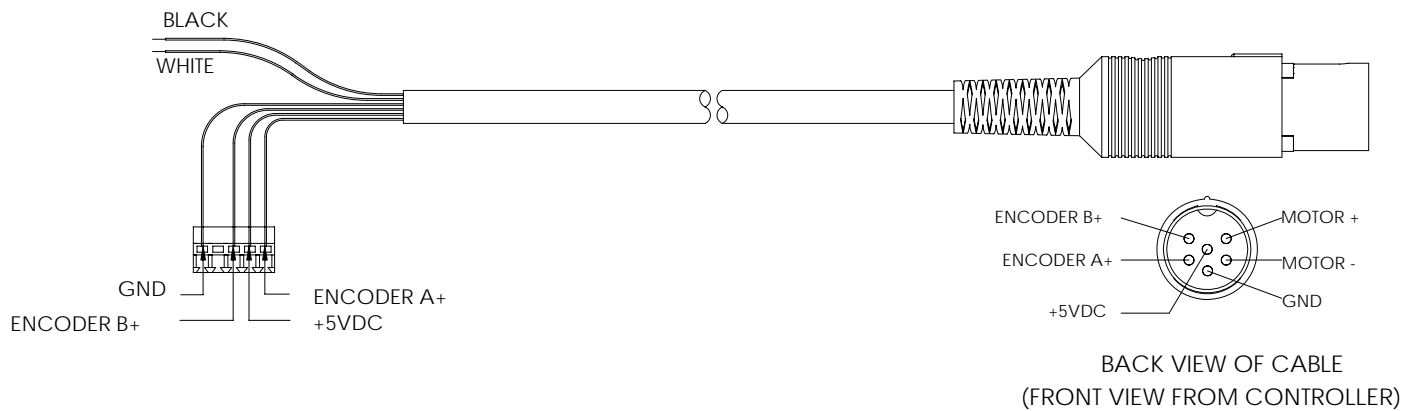

## SPARE PARTS

| Part Number | Description                   |
|-------------|-------------------------------|
| 2900-0015   | LCD, 20 x 4 with Back Light   |
| 7049-9010   | PCBA, DX-500                  |
| TSD500-30   | Pressure Regulator, 0-100 psi |
| TSD650-21   | Solenoid Valve                |
| 535         | Coupler, Panel mount          |
| TSD1121-23  | Knob, Pressure Regulator      |
| TSD1135-26  | 6 Pin Din Socket              |

## I/O Configuration and End of Cycle Switch

Upon completion of a dispense cycle, an open collector circuit closes and remains closed until the next dispense cycle. This circuit can be used to signal back to a host computer, start another device in sequence, or drive any other operations that need to be tied to the completion of the dispense cycle. Upon closure, (end of dispense cycle), power from an external source is allowed to pass through the circuit to operate a 5 to 24 VDC load. Power consumption must not exceed 250 mA. The load could be a relay, solenoid, counter, LED, or any device that will operate within a 5 to 24 VDC range and a maximum of 250 mA.

